



# Nautilus 1 (Argos) - CRS+ Software version 01.xx.xx

## CRS+

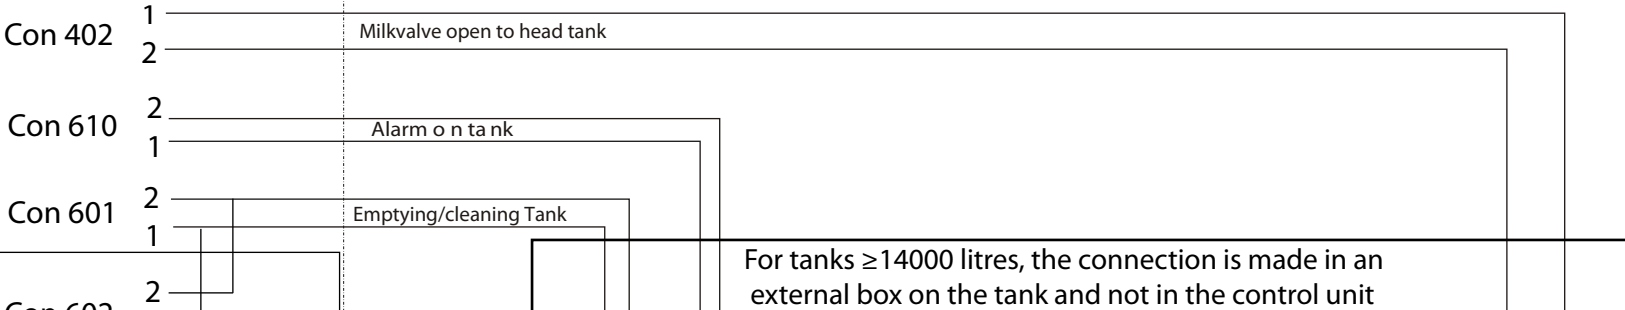

If buffertank is used  
Make a bridge between  
Con 601 and Con602

Settings  
6.5A ROBOT = L  
6.1A Alarm output= NO

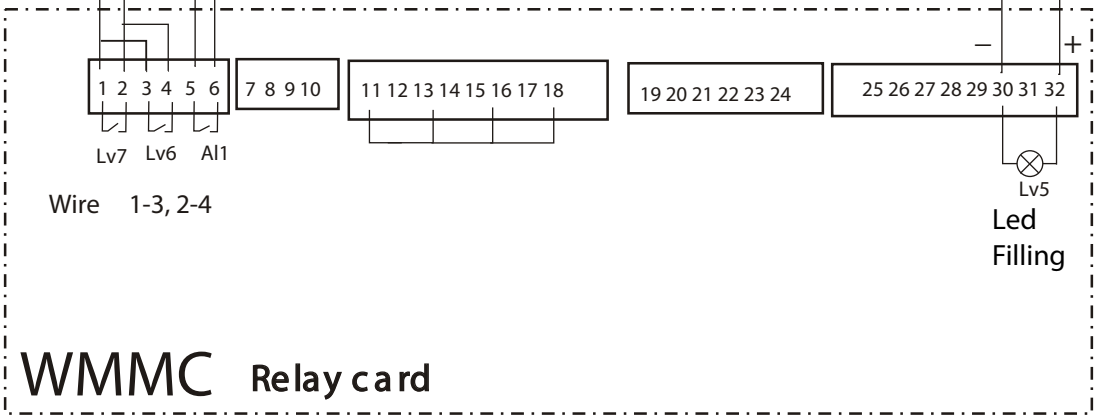

## TEST

Press "-" to EMPTYING  
Press On (signal to CRS+)  
Robot to waiting status  
If milk valve is open = WAITING  
- milk valve must be closed (Led F= off)  
before you can press ON  
Press On  
Press Off  
Press + to COOLING  
Press ON  
Cooling starts and robot can milk  
Stop cooling Press Off, Off

